

BedClaw® SlatJack™ Unibody Adjustable Center Support Leg Instructions

STEP 1

Gather necessary tools and ensure all parts are present for each leg (fig. 1). Part list included at bottom of this page.)

STEP 2

Determine the height of your bed, as measured from the floor to the bottom of the wooden slat, which the leg will be attached to.

- If the height is less than 10", you will screw the 5" adjustable glide directly into the BedClaw® SlatJack™ Unibody leg.
- If the height is about 11 to 12", you will need to use the shorter, 2.5" tall adjustable glide, leg extender, and coupler nut for additional height (fig 2).
- If the height is greater than 12", you will need to use the 5" adjustable glide, leg extender, and coupler nut for additional height. (fig 2)

STEP 3

Using the included screws, attach the leg to the underside of your wood slat. You will want to position the leg near the center of the slat. Optionally, you can pre-drill pilot holes to prevent splitting the wood. (Fig 3)

STEP 4

If space under bed is less than 10"

Thread the wing nut onto the stem of the adjustable glide, with the "wings" pointing down towards the floor. Screw the 5" glide almost completely into the BedClaw® SlatJack™ Unibody leg. (Fig 2)

If space under bed is 11" to 12"

Thread the large coupler nut halfway onto one end of the leg extender, and thread the wing nut onto the extender, with the "wings" pointing down towards the coupler nut. (Fig 2)

Thread the smaller jam nut onto the 2.5" adjustable glide. Screw the adjustable glide into the other half of the coupler nut until it firmly presses against the extension. Use a wrench to tighten the jam nut against the coupler nut until the connection is snug. Screw the assembly into the BedClaw® SlatJack™ Unibody leg.

If space under bed is over 12"


Thread the large coupler nut halfway onto one end of the leg extender, and thread the wing nut onto the extender, with the "wings" pointing down towards the coupler nut. (Fig 2)

Thread the smaller jam nut onto the 5" adjustable glide. Screw the adjustable glide into the other half of the coupler nut until it firmly presses against the extension. Use a wrench to tighten the jam nut against the coupler nut until the connection is snug. Screw the assembly into the BedClaw® SlatJack™ Unibody leg

STEP 5

Put the slat in place on your bed. Adjust the glide downward until it is resting on the floor.

Note: the glide should rest lightly on the floor. It should not be "lifting" the slat.

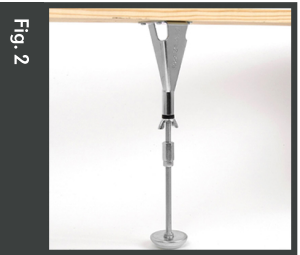

Included Parts (Per Leg)	Included Hardware (Per Leg)	Recommended Tools
1 BedClaw® SlatJack™ Leg	1 Wing Nut	Phillips Head Screwdriver
1 5" Adjustable Glide	1 Jam Nut (the small one)	1/2" Wrench
1 2.5" Adjustable Glide	1 Coupler Nut (the big one)	3/32" Drill Bit & Drill
1 Adjustable Glide Leg Extender	1 Adjustable Glide Leg Extender	Additional Person to Assist
1 Threaded Plastic Insert (in leg)		

NOTE: The BedClaw® Unibody set includes **two** glides for each leg. One is 5" long and the other is 2.5" inches long. Use **one or the other** to achieve your specific height requirement.

If using with a metal slat, please use sheet metal screws instead of the wooden screws provided.

Questions or comments?

Phone: 336-781-0504

Email: support@wallaceflynn.com



This product is covered by our **Ltd. Lifetime Service Policy**. For more information on this, visit us at www.wallaceflynncollective.com/pages/lifetime-service-policy



BedClaw® and SlatJack™ are trademarks of Wallace Flynn Inc.